



GARAGEIBN SEIDOU

Telephone: 97223326
 Fax:
 Email: assogarba@gmail.com
 Numéro T.V.A.:

1	AC control module - behind heater controls
2	Aerial selection control module - under rear window
3	Aerial signal amplifier - telephone - LH luggage compartment
4	Airbag crash sensor, driver - bottom of B-post
5	Airbag crash sensor, passenger - bottom of B-post
6	Alarm system gradient sensor - in alarm system horn
7	Alarm system horn - behind LH rear wheel arch liner
8	Alarm system in car movement sensor - in headlining
10	Audio unit output amplifier - LH luggage compartment
11	Audio unit suppressor - C-post
12	Battery - load area, under floor
13	Battery condition sensor - some models - on battery
14	Data link connector (DLC)
9	Digital audio broadcast (DAB) control module - load area, under floor
15	Door function control module, driver
16	Door function control module, passenger
17	Fuel pump control module (if fitted) - behind RH rear seat side bolster
20	Fuse box/relay plate, battery - (Valvetronic/Diesel engine management/electric auxiliary heater/power distribution) - fuses cannot be replaced separately
18	Fuse box/relay plate, fascia - behind glovebox
19	Fuse box/relay plate, plenum chamber
21	Horn 1 - behind bumper
22	Horn 2 - behind bumper
24	Indicator relay/hazard warning lamps relay - in multifunction control module 2
23	Instrumentation control module
25	Light sensor
26	Multifunction control module 1 - attached to fascia fuse box/relay plate - functions: Air conditioning (AC), central locking, electric windows, headlamp washers, heated door mirrors, heated windscreen washer jets, rear screen wash, sun blind, windscreen washers
27	Multifunction control module 2 - functions: Central locking, electric windows, fog lamps, front lights, adaptive headlamps, headlamp adjustment, heated door mirrors, indicators/hazard warning lamps, instrument illumination, rear lights, reversing lamps
28	Multifunction control module 3 - behind fascia - functions: Alarm system, central locking, immobilizer, starter motor, steering column lock
29	Multifunction control module 4 - functions: Alarm system, interior lamps, sunroof
30	Multifunction control module 5 - load area, under floor, RH - functions: Keyless entry & start system
31	Multimedia control module
32	Navigation system control module
33	Navigation system receiver
34	Outside air temperature sensor
35	Parking aid control module - load area, under floor, RH
36	Parking aid speaker, front - under fascia

37	Parking aid speaker, rear - RH luggage compartment
38	Power steering control module - active steering - behind LH front wheel arch liner
39	Seat adjustment control module 1 - under driver's seat
40	Seat adjustment control module 2 - under passenger's seat
41	Seat heater control module, driver - under seat
42	Seat heater control module, passenger - under seat
43	Steering column function control module
44	Sunroof control module
45	Supplementary restraint system (SRS) control module
46	Suspension ride height sensor, right front
47	Suspension ride height sensor, right rear
48	Switch assembly control module - i-drive
49	Telematics control module - load area, under floor
50	Telephone transceiver - Bluetooth - under fascia
51	Trailer control module - load area, under floor, RH
52	Transmission control module (TCM) - on gearbox
53	Voice activation control module - load area, under floor
54	Windscreen wiper rain sensor

